Standard blind control button Order-No. : 2324 ..

#### **Operating instructions**

### **1** Safety instructions

Electrical equipment may only be installed and fitted by electrically skilled persons.

Serious injuries, fire or property damage possible. Please read and follow manual fully.

Danger of electric shock. Always disconnect before carrying out work on the devise or load. At the same time, take into account all circuit breakers that supply dangerous voltage to the device or load.

Danger of electric shock. Device is not suitable for disconnection from supply voltage.

These instructions are an integral part of the product, and must remain with the end customer.

### **2** Device components



Figure 1: Device components

- (1) Venetian blind control
- (2) Frame
- (3) Cover

### **3** Function

#### Intended use

- Operation of electrically-driven blinds, shutters and awnings
- Operation on control of the Venetian blind control system

## 4 Operation

#### Moving the Venetian blind

- Press top or bottom of cover for longer than one second.
- The Venetian blind moves in the desired direction to the end position or stops when the button is pressed again.

### Adjusting the slats

Press top or bottom of cover for shorter than one second.
The slat position changes in the desired direction for as long as the button is pressed.

# **5** Information for electrically skilled persons

## 5.1 Fitting and electrical connection

DANGER!
Electrical shock when live parts are touched.
Electrical shocks can be fatal.
Before carrying out work on the device or load, disengage all the corresponding circuit breakers. Cover up live parts in the working environment.

#### Fitting the device

The Venetian blind control is mounted and connected properly (see instructions for the relevant Venetian blind control).

- Mount cover (3) with frame (2) onto the Venetian blind control (1) (Figure 1).
- Switch on mains voltage.

# 6 Appendix

### 6.1 Technical data

Ambient temperature Storage/transport temperature Switch-over time for direction change Switch-on time 0 ... +45 °C -10 ... +60 °C approx. 1 s approx. 2 min

## 6.2 Warranty

The warranty is provided in accordance with statutory requirements via the specialist trade.

Please submit or send faulty devices postage paid together with an error description to your responsible salesperson (specialist trade/installation company/electrical specialist trade). They will forward the devices to the Gira Service Center.

Gira Giersiepen GmbH & Co. KG Elektro-Installations-Systeme

Industriegebiet Mermbach Dahlienstraße 42477 Radevormwald

Postfach 12 20 42461 Radevormwald

Deutschland

Tel +49(0)21 95 - 602-0 Fax +49(0)21 95 - 602-191

www.gira.de info@gira.de